

Memory frequency setting.

### **Transmitting & Receiving on different frequencies.**

E.g. Channel 1

Receiving frequency 146.675	439.500
Transmit frequency 146.075	434.500

Input by number pad the receiving frequency  
i.e. 146675 439.500  
Press “B” key, channel number shines  
Press [ ^ ] or [ v ] to show channel No 1

Press “C” key, channel number disappears,  
Receive frequency is displayed  
Receive frequency is set.

Input transmit frequency by number keypad  
Press “B” key, Channel No 1 shows

Press “D” key, channel No disappears  
Frequency displays  
Transmit frequency is set

### **Setting simplex frequency**

E.g. Channel 2

Input frequency via key pad  
e.g. 146.500.  
Press “B” key, a channel number appears  
Press up or down to select channel no required

Press “C: key, channel No disappears  
Frequency displays, frequency is set.

### **Setting plus or minus offset for repeater operation.**

Press (Set) key, press “6”, + offset appears

Press (Set) key, press “6”, - offset appears

Press (Set) key, press “6”, no offset  
(Select whichever is required)

### **Setting offset difference**

E.g. 600 KHz for VHF repeater or 5 MHz for UHF

Press (Set) key, press “7”  
Input frequency difference on keypad (in megahertz)

E.g. for 600 KHz input 006 e.g. 0500 for 5 MHz

Press (Set) to return to frequency mode

